

# ROTAMB V2 DRUM-WHEEL

Device for Moving 200 lt / 55 gallon Metal Drums (máx. 250 Kg)

## Description of the Device

The ROTAMB V2 Drum-Wheel is a tool for lifting drums (max. weight: 250 kg) vertically with mechanical means – cranes, winches, etc –



and once in the air, guiding it to its destination by grasping the wheel without direct contact between the user and the drum.

The drum-wheel is built using structural pipes (SAE1010) joined by MIG welding. In order to prevent materials deterioration due to corrosion, the tool undergoes a “passivation” treatment which consists of a covering layer of epoxy paint by electro deposition on the exterior surfaces and an anticorrosive protective oil bath in its interior.


## Storage Conditions

Keep away from water and corrosive agents.

## Maintenance

Periodically check the lubrication of the clamp lever and the condition of the welding. If there are loose parts, signs of evident corrosion, deformations or any other abnormal condition, remove the drum-wheel from the work area.

Approx. weight: [kg]	12 Kg
Measurements: (Length x width x height) [mt]	,65 x 0,65 x 0,2

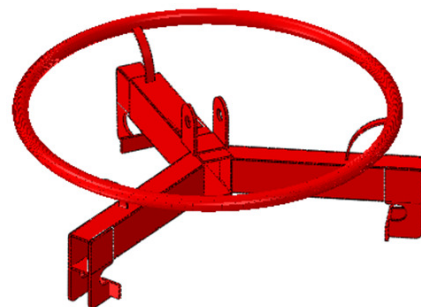

## Instructions for Use

Place the movable, sliding arm towards the front, pointing away from the user and then place the 2 remaining fixed arms so that they are in contact with lateral, rounded sides of the drum. Then lower the movable sliding arm to the appropriate position and adjust the clamp lever so that the drum is firmly held by the three arms. Before starting to lift the drum, make sure it is firmly grasped. If this is not the case, check the adjustment of the sliding arm, rotating the plastic knob placed at the end of the movable arm clockwise to reduce its diameter or counter clockwise to lengthen it. The clamp lever comes equipped with a safety pin that automatically blocks the movement of the sliding arm when it is closed to avoid accidental opening. To release it, the vertical safety pin must be lifted with one hand while the other hand moves the lever.

### WARNING:

- **V2 Drum-wheel should only be lifted from its central support point. DO NOT ATTACH THE DRUM TO ANY OTHER POINT OF THE V2 DRUM-WHEEL.**
- **The wheel itself should not be used for ground movement by rotation but rather only for manipulation and directing the movement of the drum once it is in the air.**